



1. Install DD-S21-60BRT bracket onto a 60mm fan.

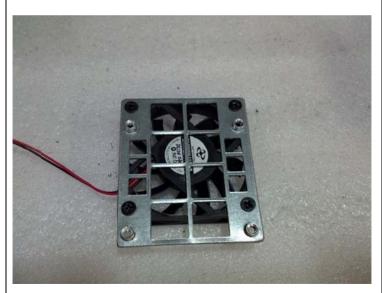

2. Secure fan bracket with 4 fan screws. Make sure air flow is correct.

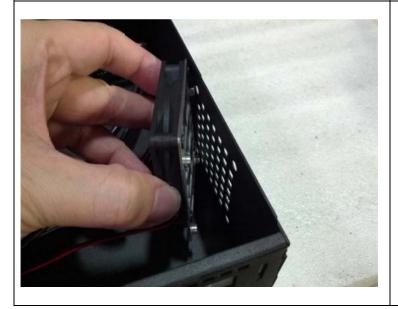

3. Mount fan bracket onto chassis



4. Secure fan bracket onto chassis with 4 screws from outside of chassis.



5. finish



add-on card cannot be used when fan is in place.